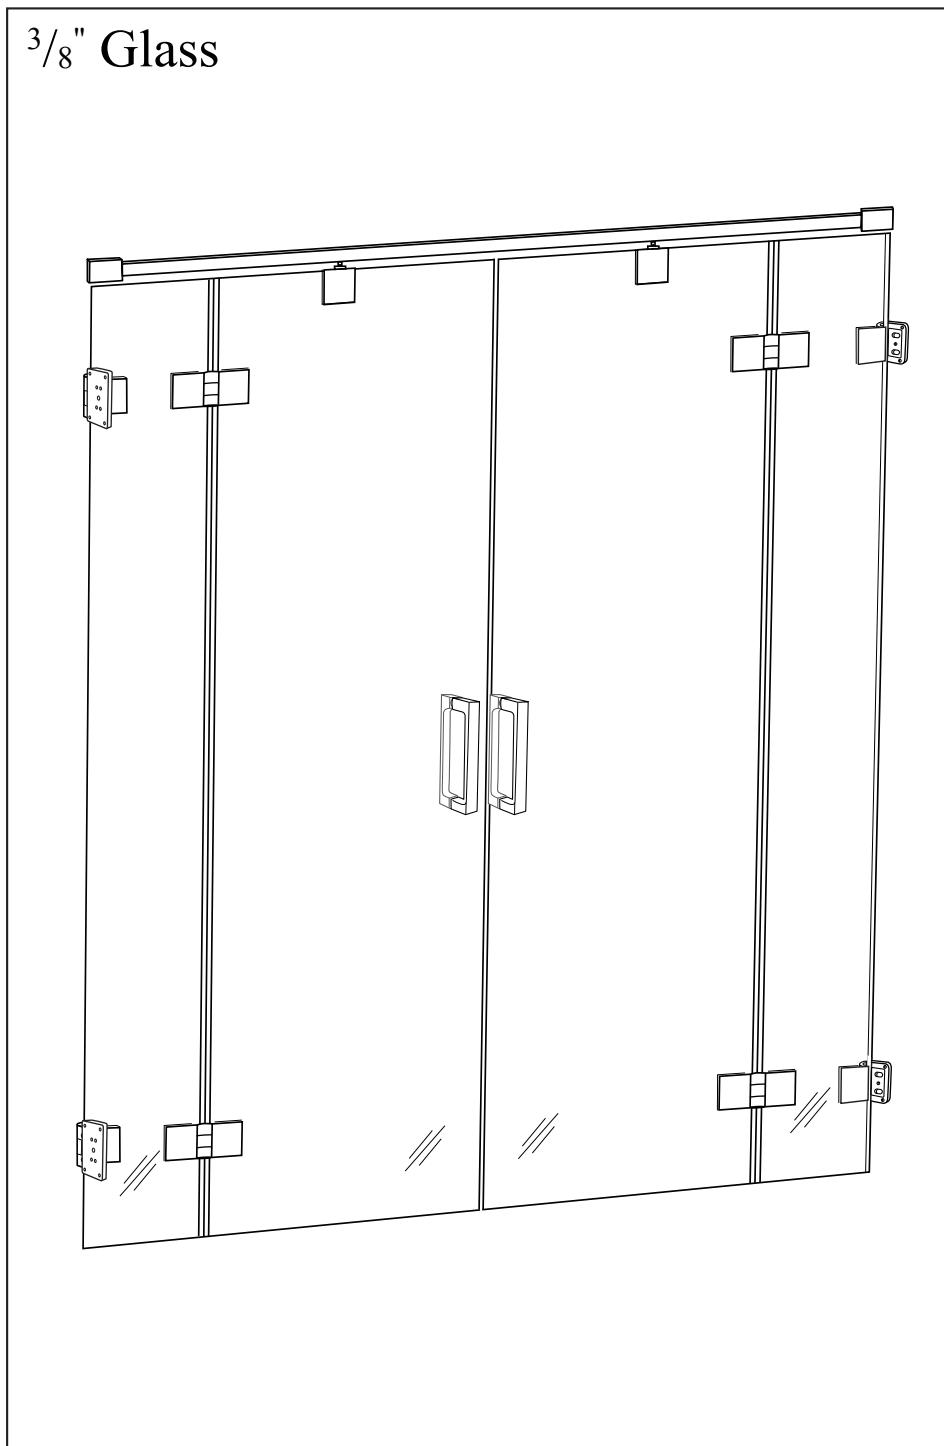
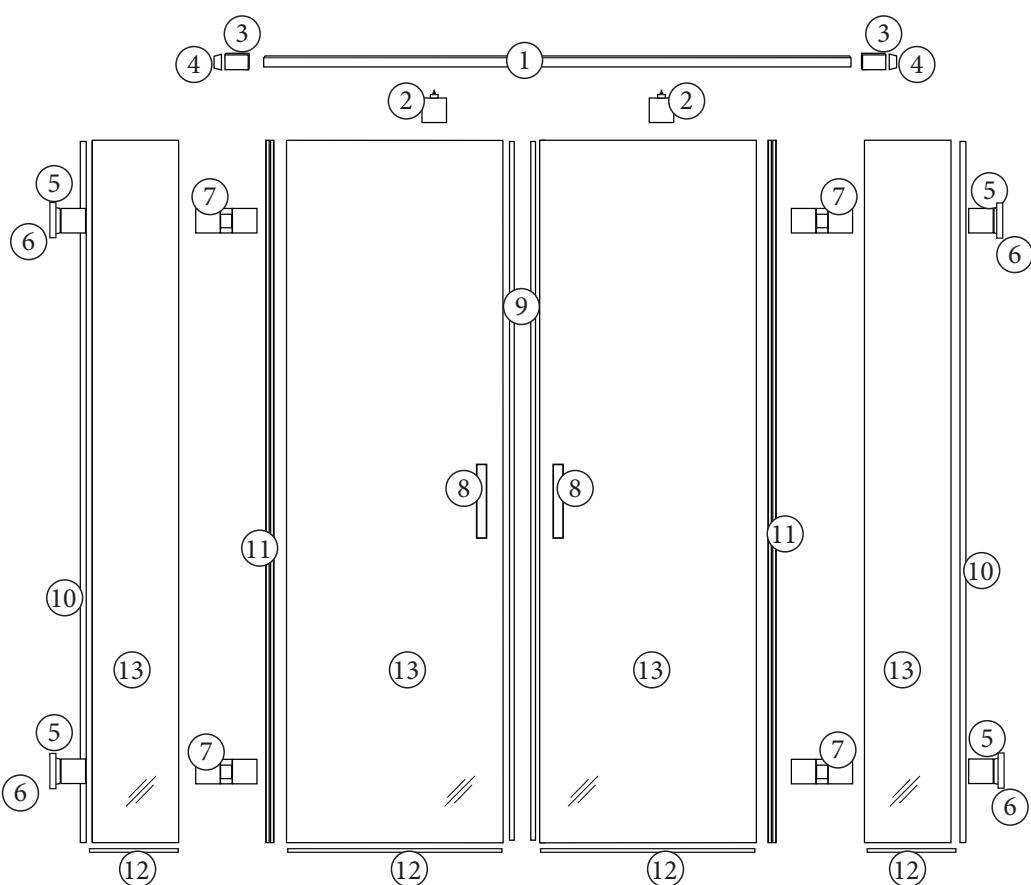


BF-1629 Bifold Door Installation Guide

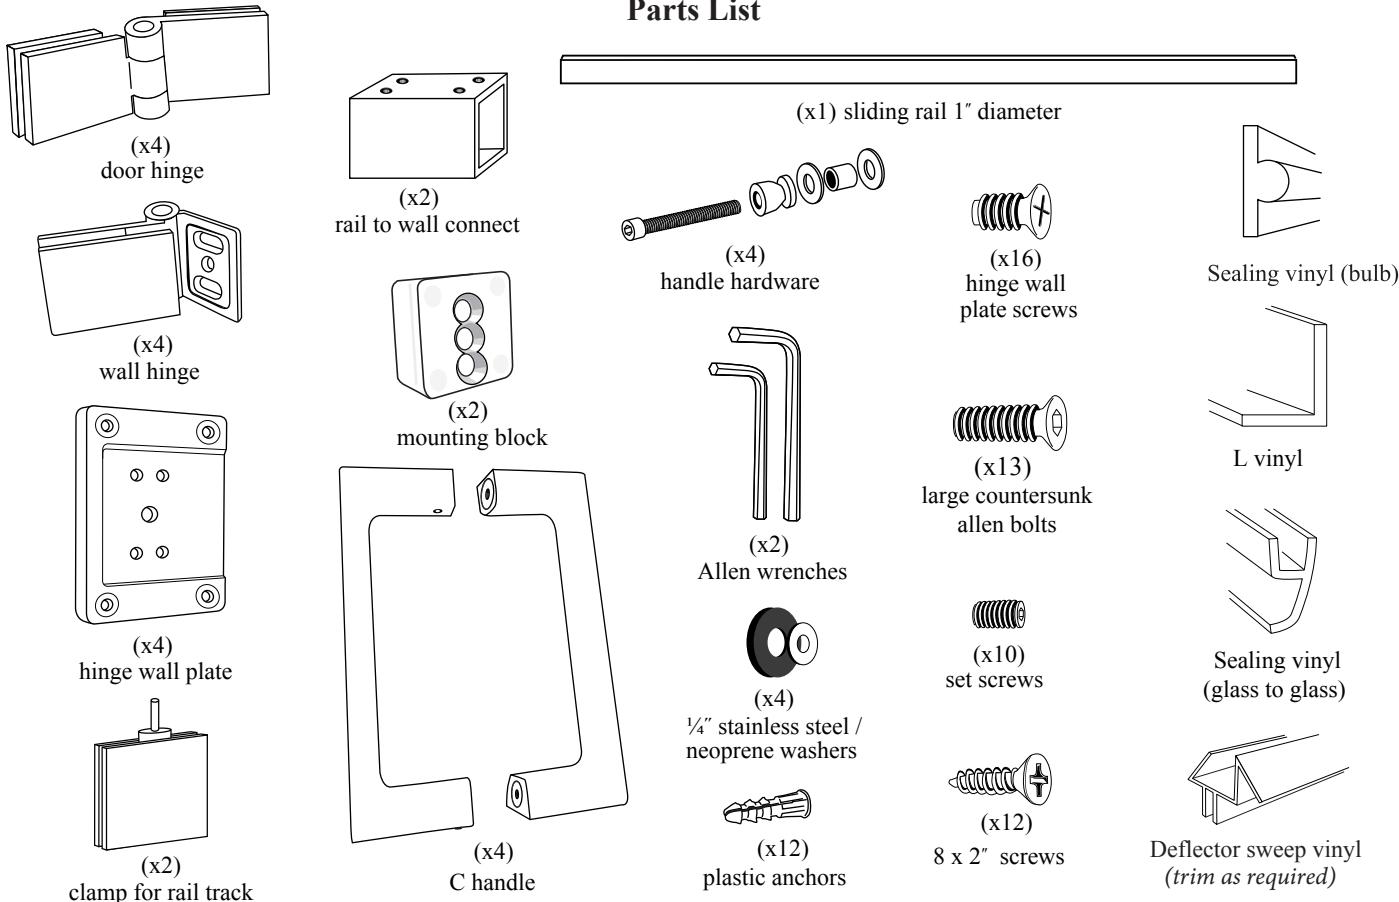


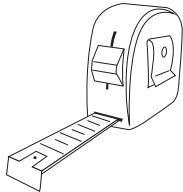
Detailed diagram of BF-1629 components

#	Part Name	Qty
1	Sliding Rail	1
2	Rail track clamp	2
3	Rail to Wall Connect	2
4	Mounting block	2
5	Wall hinge	4
6	Hinge wall plate	4
7	Door hinge	4
8	C handle set	2
9	Sealing vinyl - bulb	2
10	L-vinyl	2
11	Sealing vinyl	1
12	Deflector sweep	1
13	Glass doors	4
See parts list below:		
14	Handle hardware	4
15	Allen wrenches	1
16	Screws	12
17	Hinge wall plate screws	16
18	Set screws	10
19	Countersunk allen bolts	13
20	Anchors	12
21	Steel/Neoprene washers	4




Parts List

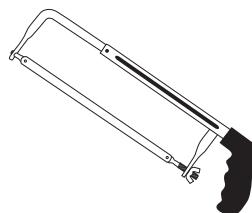


Tools required


Tape Measure



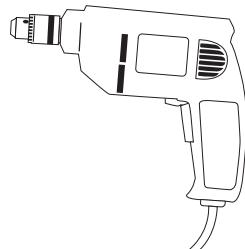
Level


 Hacksaw
 (or Chopsaw w/metal blade)

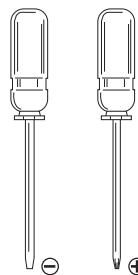
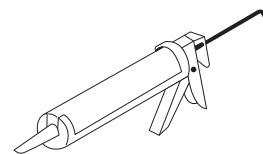

Safety glasses



Pencil/Marker


 Drill bit
 3/16" carbide masonry bit,


Drill


 Flat and Phillips
 head Screwdrivers


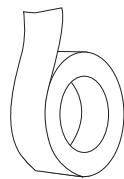
Caulk gun



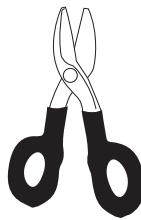
Piece of carpet/ padding



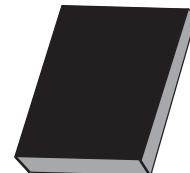

Rubber mallet



Masking tape



Scissors

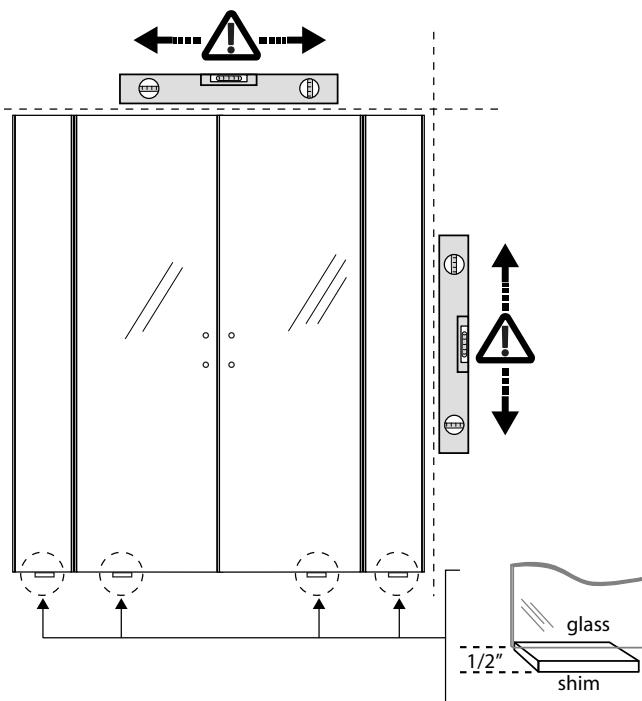

 Glazing block/
 piece of wood (2"x 4")


Glass cleaner


WARNINGS

- **Before starting, please read instructions carefully and thoroughly; then proceed step by step.
- **Please wear safety glasses and safety gloves whenever drilling or cutting tile or handling metal/glass parts.
- **When drilling through tile, carefully break through glazed surface only with sharp tool and then drill slowly.
- **Wall uprights must be installed level and plumb. Do not follow grout lines.
- **To insure complete customer satisfaction Century Bathworks recommends installation by a professional.
- **Risk of injury or product damage. Two people should perform this installation.
- **Do not cut the top and bottom track the same length for this installation.
- **Please carefully unpack all parts for your unit as listed on previous page and also check that you have all the tools as listed above.
- **If any parts are missing or damaged, please contact Century Bathworks or your dealer for replacements.

1

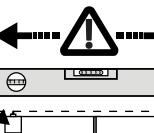
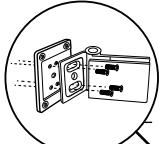


Required:
Rubber mallet, level, pencil/marker

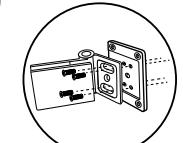
- Rest door on 1/2" shims over centerline of opening.

2

Assemble wall hinge to hinge plate as shown.



Assemble wall hinge to hinge plate as shown.



Assemble wall hinge to hinge plate as shown.

Assemble wall hinge to hinge plate as shown.


Required:
Rubber mallet, level, pencil/marker

- Plumb door with hinges resting against the wall and transfer mounting hole locations.

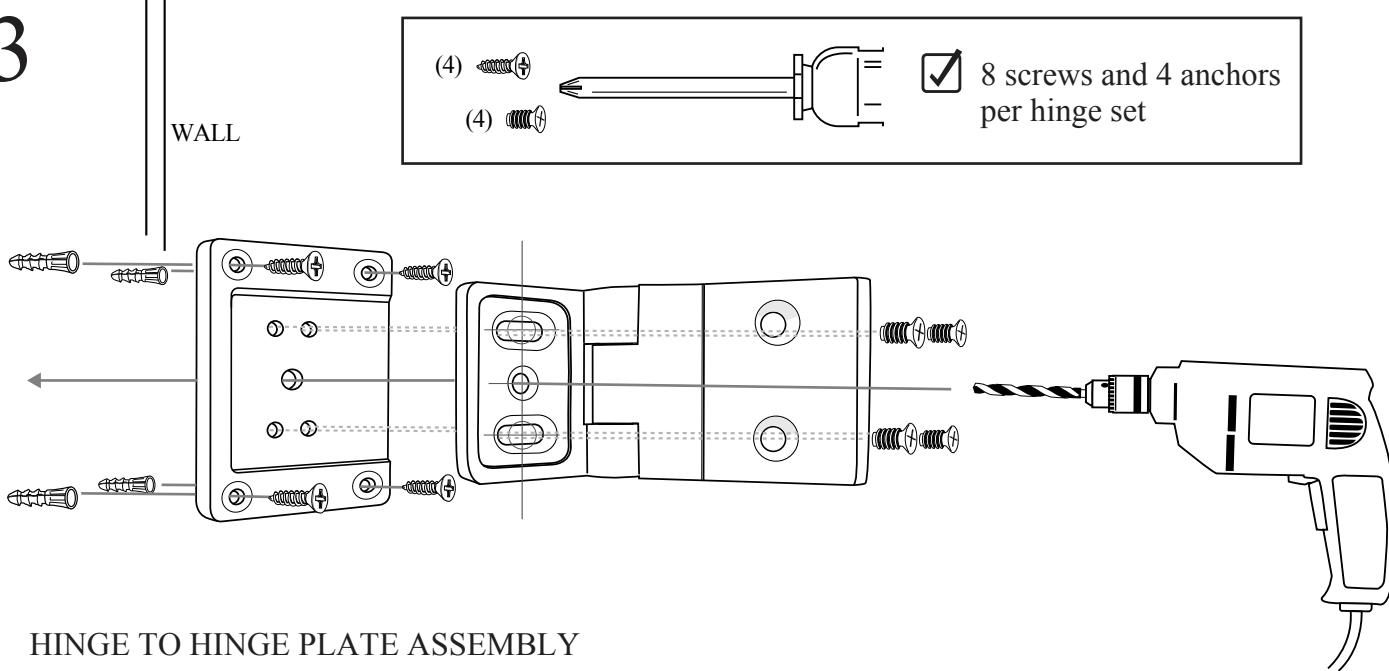
3

WALL

(4) (4)



8 screws and 4 anchors per hinge set




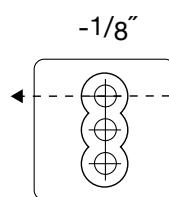
HINGE TO HINGE PLATE ASSEMBLY

Required:
#32 metal drill bit, screwdriver, tape measure

- Remove the door and drill pilot holes for appropriate wall anchors and assemble both hinge sets to wall as shown.

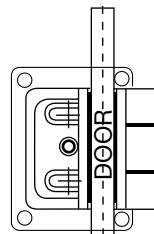
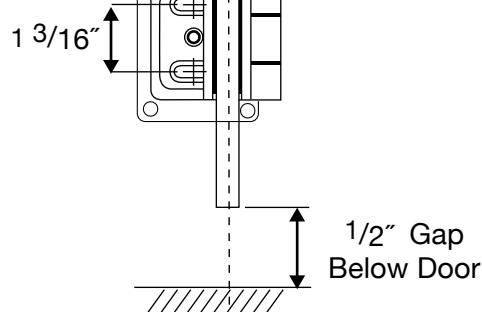
4

Center Line

**-3/16"****-1/16"****-1/8"****-3/16"**

Adjust header
level as needed

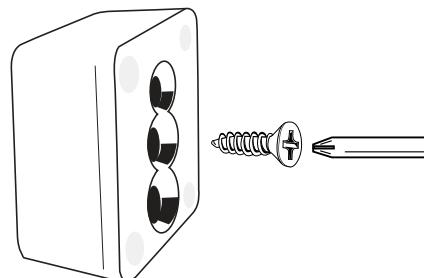
OUTSIDE OF SHOWER DOOR

**13/16"****1/2" Gap
Below Door**

Required:

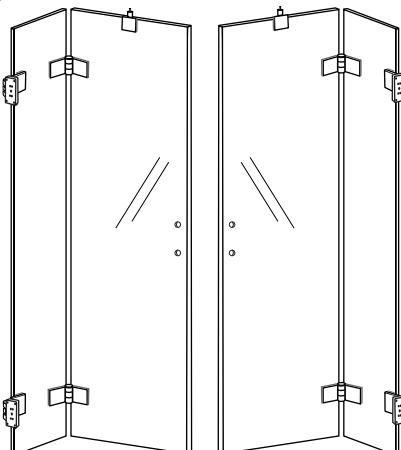
#32 metal drill bit, pencil/marker

- Mark 13/16" above door on centerline of each wall. Drill appropriate holes for anchors and wall brackets.

5

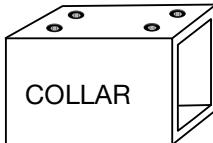

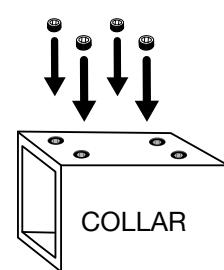

Required:
Screwdriver

- Mount wall brackets

6

Required:
Screwdriver

- Adjust door to the open position.

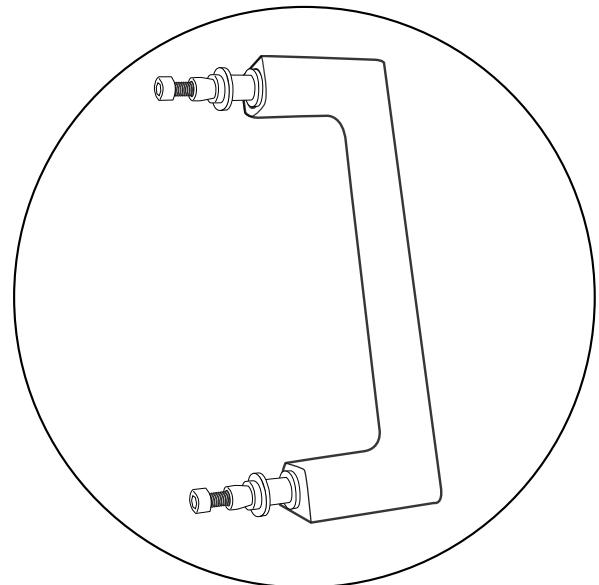
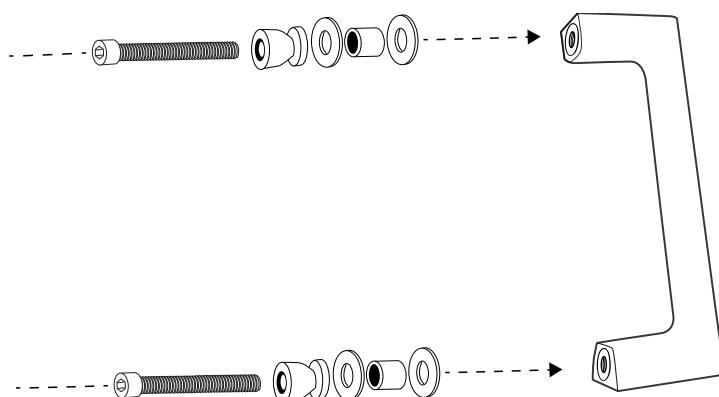
7WALL
BRACKET**COLLAR****1/8"****HEADER****COLLAR**WALL
BRACKET**GLASS**

Required:

Rubber mallet, allen wrench, screwdriver, tape measure

- Slide collars onto header. Align rail with wall brackets and slide collars over wall brackets. Tighten set screws to wall brackets first. then tighten set screws to header. Collars should have a 1/8" gap above the door.

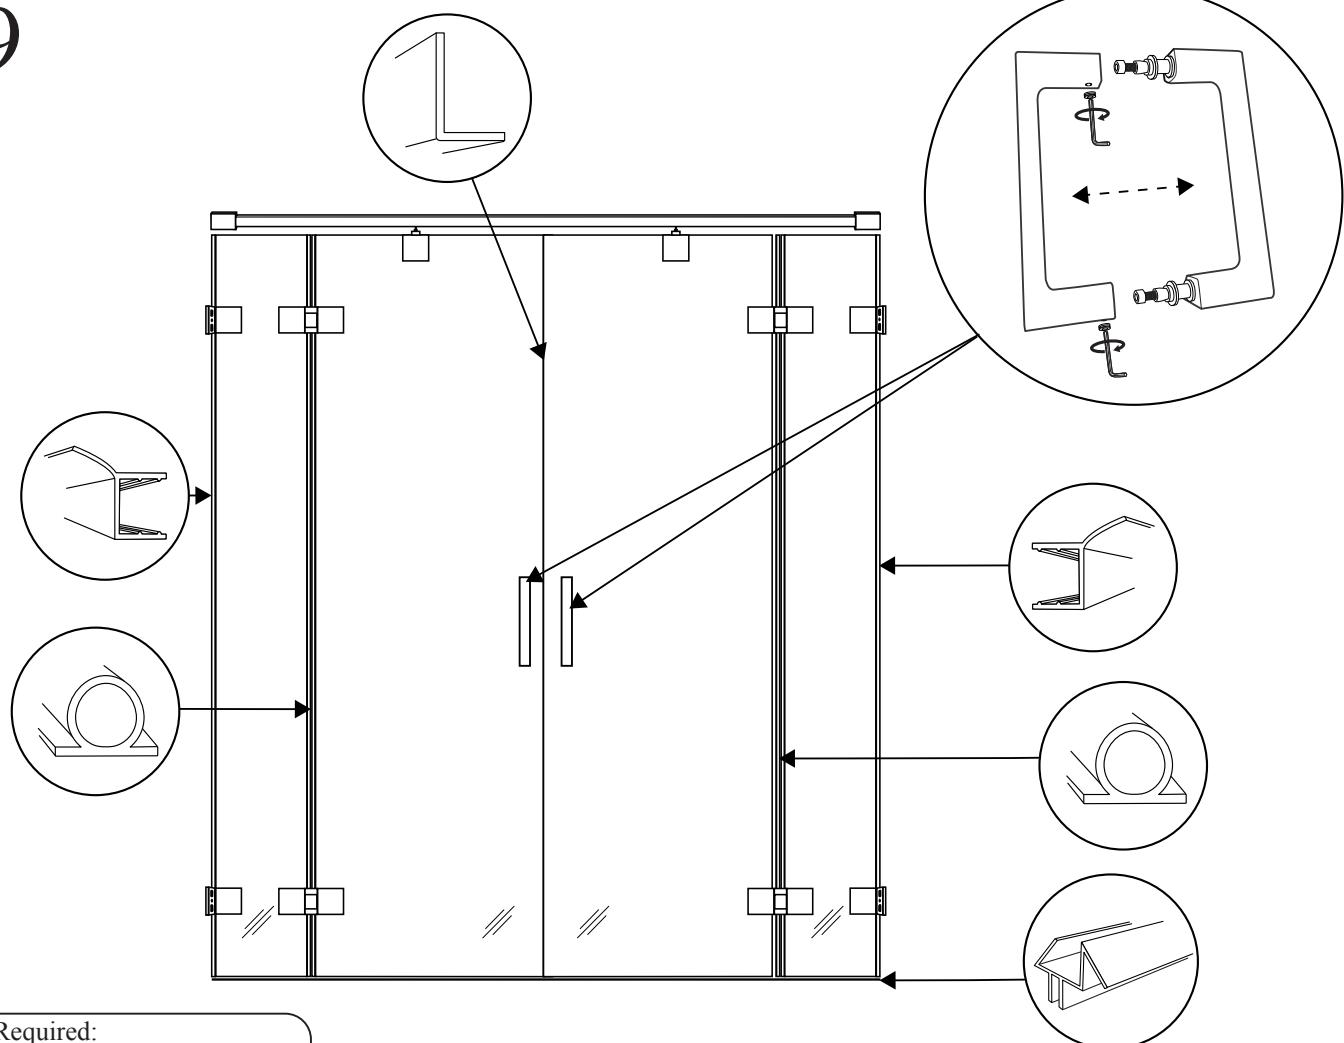
8



Required:
 Allen wrench

- Assemble and install handles

9



Required:
 Rubber mallet, allen wrench

- Install handles and seals on glass edges